



## 1000W Microwave



**Model:** 177MW1000PB

07/2019

***Please read and keep these instructions. Indoor use only.***

## IMPORTANT SAFETY INSTRUCTIONS



When using electrical equipment, basic safety precautions should be followed to reduce the risk of burns, electrical shock, fire, or injury to persons.

**READ ALL OF THE INSTRUCTIONS BEFORE USING THIS EQUIPMENT.**

1. This equipment **MUST BE GROUNDED**. Connect only to properly GROUNDED outlet. See “**GROUNDING INSTRUCTIONS**” on page 3 for further details.
2. Use this equipment **ONLY** for its intended use as described in this manual. This type of microwave is specifically designed to heat, cook or dry food. It is not designed for industrial, laboratory or commercial food service use.
3. **DO NOT** heat items able to explode in this microwave, such as: eggs, sealed containers, glass jars, etc.
4. **DO NOT** operate this equipment if the cord, plug and/or door is damaged, if is not working properly or if it has been damaged or dropped.
5. This equipment, including power cord, must be serviced **ONLY** by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
6. **DO NOT** cover or block filter or other openings on equipment.
7. **DO NOT** store this equipment outdoors.
8. **DO NOT** use this product near water or immerse the cord and/or plug in water.
9. Keep cord **AWAY** from **HEATED** surfaces.
10. **DO NOT** let cord hang over edge of table or counter.
11. **DO NOT** overcook food as to avoid fire in microwave cavity.
12. If materials inside the microwave ignite, keep microwave door **CLOSED**, turn microwave off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
13. **DO NOT** use the cavity for storage.
14. Do not overheat liquids.
15. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
16. **DO NOT** operate equipment without load or food in microwave cavity.
17. **DO NOT** use metal utensils in microwave.
18. **NEVER** use paper, plastic, or combustible materials that are not intended for cooking.
19. Clean microwave regularly and remove any food deposits.
20. Not certified for commercial food service use.
21. This product is intended for office/light duty non-commercial food service use. Excessive use can shorten the lifespan of electrical parts.

**SAVE THESE INSTRUCTIONS**



**TO AVOID RISK OF ELECTRICAL SHOCK OR DEATH, THIS MICROWAVE MUST BE EARTHED. TO AVOID RISK OF ELECTRICAL SHOCK OR DEATH, DO NOT ALTER THE PLUG.**

## ***OPENING YOUR NEW MICROWAVE***

- Inspect microwave for any damage such as cracks or dents in door or inside microwave cavity.
- Remove all materials from microwave interior.
- Remove all plastic wrap and packaging material before use.
- Do not install microwave next to or above source of heat, such as an oven or radiator. This could cause the microwave oven to operate improperly and could shorten life of electrical parts.
- Install microwave on a level countertop surface.
- Outlet should be located so that the plug is accessible when microwave is in place.

## ***GROUNDING INSTRUCTIONS***


 




Microwave **MUST** be grounded. Grounding reduces risk of electric shock by providing an escape wire for the electric current, if an electrical short occurs. This microwave is equipped with a cord having a ground wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. Do not use an extension cord.

## PUSH BUTTON OPERATION


### TURNING THE MICROWAVE ON:

- "-- --" displays when the microwave is powered up for the first time.

### TIME ENTRY:



- The user may manually enter a cook time and power level while in this mode.
- During Ready Mode LED displays "0:00".
- While the microwave is in the Ready Mode, pressing the  key will put the microwave into Time Entry Mode: "00:00" will display.
- Press ,  or  key to select power level, LED will display the related power. If the same key is pressed twice, the power will change to PL10 (Power Level 10 or full power). If no power is chosen, PL10 is the default.
- During setting process, press the  key to enter Time Entry Mode and begin cooking. Press the  key to enter Ready Mode.

### MANUAL COOK MODE:




- This mode allows cooking of the food items. While in Manual Cook Entry Mode, pressing the  key will cause the microwave to begin Manual Cook Mode.
- During this mode, cooking time displays, the fan operates and microwave light will be on.



## PROGRAMMING MODE

1. This mode allows the user to assign cook times and power levels to the keypad number keys.
2. Open the door and press and hold Number Key 1 for 5 seconds. The buzzer sounds once to indicate. Programming Mode is activated.
3. LED displays "ProG". Program settings are now ready to be entered.
4. Selected desired number, 1-10, for the programmed setting.
5. Press the  key, LED will display the saved time. Input desired new time.
6. Select desired power level. LED will display the related power. If no power chosen, the maximum power level, 100%, is the default.
7. After setting the time and power, press the  key to save the cooking program. LED displays "ProG".
8. Close the door and the microwave will return to Ready Mode.

### EXAMPLE:

- For a cook setting of 1 minute and 15 seconds at 50% power under the number 4 key.
- Open microwave door and press Number Key "1" for 5 seconds, LED displays "ProG".
- Press Number Key "4". The program will be saved in "4".
- Press the  key, LED displays "0:00".
- Press Number Keys "1", "1" and "5" to input the cooking time, LED displays 1:15.
- Press the  key to input 50% power level. LED displays "PL5".
- Press  key to save.
- Close microwave door.
- To use this program press "4". The microwave will start operating for 1:15 at 50% power.



## CARE AND CLEANING



**TO AVOID ELECTRICAL SHOCK WHICH CAN CAUSE SEVERE PERSONAL INJURY OR DEATH, UNPLUG POWER CORD OR OPEN CIRCUIT BREAKER TO MICROWAVE BEFORE CLEANING OR REMOVING LIGHT BULB.**

- Cleaning the interior and exterior will require a mild detergent, water and a soft sponge or cloth.
- Do not use cleaners that include ammonia or citrus.
- Do not use water pressure cleaning systems on your microwave.
- Inspect air vents monthly and clean using a damp cloth.

## TROUBLESHOOTING

COMPLAINT	POSSIBLE CAUSE	REMEDY
Dim microwave light	Cooking at low power level	This is normal
Steam forms on microwave door	When cooking foods in a microwave steam is generated.	This is normal
Hot air expelled from vents	Foods cooking in a microwave may release heat	This is normal
Microwave does not start	Power cord not plugged in correctly	Plug cord into outlet correctly
	Fuse blown or circuit breaker open	Replace fuse (should be repaired by authorized servicer) or reset breaker
	Malfunctioning outlet	Test outlet with other electrical appliance
	Door not closed	Close door

## Equipment Limited Warranty

Galaxy warrants its equipment to be free from defects in material and workmanship for a period of **90 days**. This is the sole and exclusive warranty made by Galaxy covering your Galaxy brand equipment. A claim under this warranty must be made within **90 days** from the **date of purchase** of the equipment. Only the equipment's original purchaser may make a claim under this warranty. Galaxy reserves the right to approve or deny the repair or replacement of any part or repair request. The warranty is not transferable. Galaxy Equipment installed in/on a food truck or trailer will be limited to a period of **30 days** from the original date of purchase.

### To Make a Warranty Claim:

For Warranty Inquiries contact the location where you purchased the product:

- **WebstaurantStore.com:** Contact [help@webstaurantstore.com](mailto:help@webstaurantstore.com). Please have your order number ready.
- **The Restaurant Store:** If you purchased this unit from your local store, please contact your store directly.
- **TheRestaurantStore.com:** Online purchases, call 717-392-7261. Please have your order number ready.

Failure to contact the designated location prior to obtaining equipment service may void your warranty.

### EQUIPMENT IS NOT AUTHORIZED FOR USE IN A COMMERCIAL APPLICATIONS.

Galaxy makes no other warranties, express or implied, statutory or otherwise, and **HEREBY DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.**

### This Limited Warranty does not cover:

- Equipment sold or used outside the Continental United States
- Use of unfiltered water (if applicable)
- Galaxy has the sole discretion on wearable parts not covered under warranty
- Equipment not purchased directly from an authorized dealer
- Equipment that has been altered, modified, or repaired by anyone other than an authorized service agency
- Equipment where the serial number plate has been removed or altered.
- Damage or failure due to improper installation, improper utility connection or supply, and issues resulting from improper ventilation or airflow.
- Defects and damage due to improper maintenance, wear and tear, misuse, abuse, vandalism, or Act of God.

Any action for breach of this warranty must be commenced within **90 days** of the date on which the breach occurred. No modification of this warranty, or waiver of its terms, shall be effective unless approved in a writing signed by the parties. The laws of the Commonwealth of Pennsylvania shall govern this warranty and the parties' rights and duties under it. Galaxy shall not under any circumstances be liable for incidental or consequential damages of any kind, including but not limited to loss of profits.